


Installation Instructions Honda CRF PowerFlow kit with Inner Sealing Ring 150212c / 150213c / 150214c

Step 1 – Remove OEM inner sealing ring, connection tube, and outside air boot sealing ring. Refer to owners manual.



Step 2 - Before installing Twin Air Inner Sealing Ring, apply a bead of silicone sealant into the machined groove on the Twin Air Inner Sealing Ring.

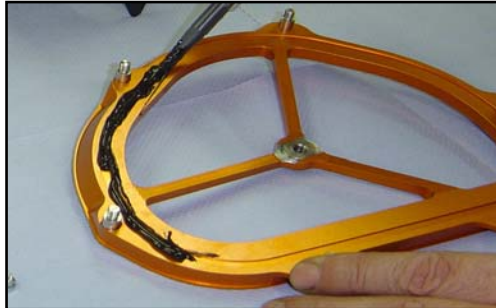

Step 3 – Install Twin Air Inner Sealing Ring into the airbox, attach air boot, and outer air boot sealing ring. Tighten nuts to clamp airbox together. *Optional Twin Air Outer Sealing Ring Available (150212/150214 OSR)*



Step 4 – When you are finished assembling the airbox, you need to cut off the rubber lip on the inside of the air boot.



For more information, please call 800-749-2890 or visit www.twinair.com or www.twinairusa.com.