

Part Number 156058P

**Pre-Oiled Air Filter (FR) incl. intake (pe/pp)
Can-Am Outlander 650, Outlander/Renegade 800
(With Rubber Dia-116,5mm)**


Instructions:

Air Filter Removal

1. Remove driver's seat.
2. Lift and pull out console cover. (Picture 1)



Picture 1: Console Cover

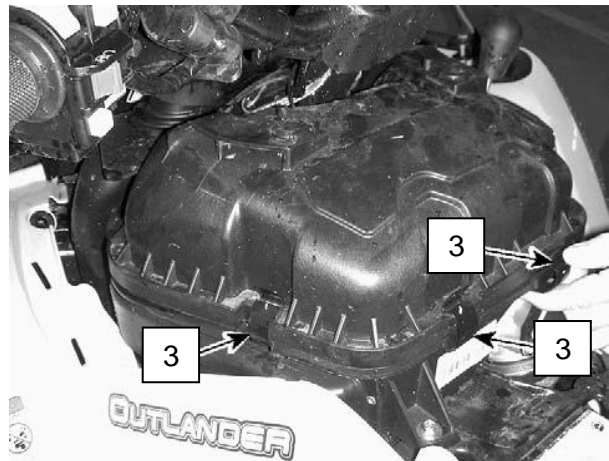

Picture 2: Air box

3. Open 6 retaining clips around air box. (Picture 2)
4. Remove air box cover.
5. Remove air filter retaining screw and keep for reinstallation. (Picture 3)




Picture 3: OEM air filter

6. Remove OEM air filter assembly.




Air Filter Installation

1. Remove foam spacer in bottom of air box. (Picture 4)

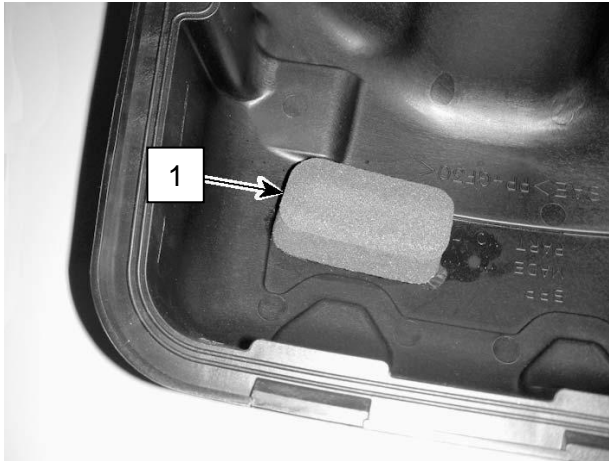

Picture 4: Foam Spacer

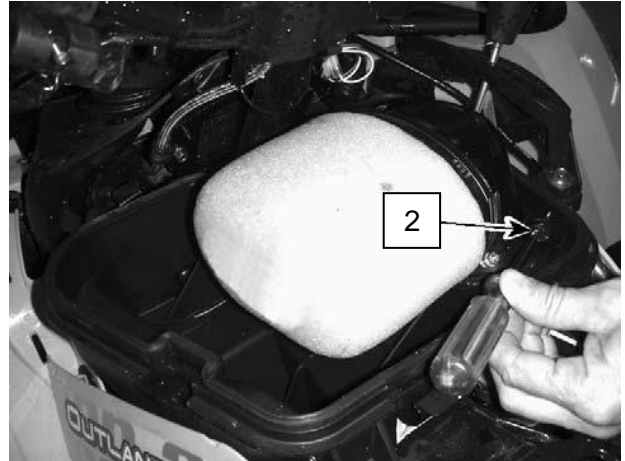

Picture 5: Twin Air filter

2. Install new filter to the supplied intake tube and install filter/tube assembly in place and secure with retaining screw. (Picture 5)
3. Install air box cover and secure with retaining clips.
4. Install console cover.
5. Install driver seat. Install passenger seat if applicable.

Twin Air Parts and Accessories

- PowerFlow Replacement Air Filter: #156058FR
- Replacement Oil Filter: #140021

Twin Air Cleaning and Oiling Products

- Bio Dirt Remover: #159004
- Liquid Bio Power: #159017
- Bio Pack (Dirt Remover / Liquid Power): #159020
- Bio Spray: #159018M
- Twin Air Bio System: #159000BIO

For more details or to purchase these or other Twin Air products go to www.twinair.com, www.twinairusa.com or visit your local Twin Air Authorized Dealer.